

Remote Control

AP 410

Remote

Setting up the remote control

1. Remove the cover from the back of the remote control.
2. Insert 2 AAA batteries.
3. Point the remote control at the portable air conditioner (make sure the air conditioner is plugged in) and press the button for the operation that you want.

Notes:

Point the remote control at the portable air conditioner when you are using the remote. The remote control sensor is located under the little red square on the top of the portable air conditioner.

When the remote control is used to change most settings on the portable air conditioner, the portable air conditioner will emit a beep.

The maximum range for the remote control is 13 feet.

Remove the batteries from the remote control if you are not going to use it for several weeks or more.


Caution:

Do not abuse the remote control.

Do not expose the remote control to direct sunlight or leave it next to a radiator or another source of heat.

Do not mix different types of batteries in the remote control.

Remote control functions

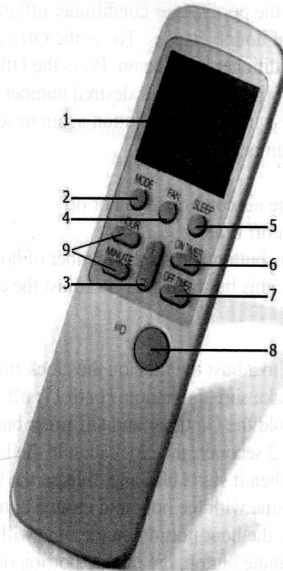

1. LCD Display
This displays the time and the settings selected for the portable air conditioner.
2. Mode selection button
This button toggles between the different modes of the portable air conditioner.
3. Temperature up and down button
The "+" part of the button increases the thermostat's temperature setting.
The "-" part of the button decreases the thermostat's temperature setting.
These adjustments are only used in the Cooling mode.
4. Fan speed selection button
This button adjusts the fan speed between the high and low settings.
5. Sleep function button
This button activates or deactivates the Sleep function.
Press it once to activate the Sleep function and twice to deactivate the Sleep function. The Sleep function can be used in Cooling mode. In Cooling mode, the Sleep function raises the thermostat's temperature setting by 1.5°F per hour, for two hours. This function is often used in conjunction with the Timer off function.
6. "On Timer" button
This button activates or deactivates the "On timer." As noted in more detail above, the On timer turns the portable air conditioner on after a number of hours (you select the number of hours) elapses. To set the On timer using the remote control, the portable air conditioner must be off. Press the On timer button once. Press the

Hour button several times until your desired number of hours appears in the remote control. Press the On timer button again to set the portable air conditioner to turn on in that number of hours.

7. "Off Timer" button

This button activates or deactivates the "Off timer." As noted in more detail above, the Off timer turns the portable air conditioner off after a number of hours (you select the number of hours) elapses. To set the Off timer using the remote control, the portable air conditioner must be on. Press the Off timer button once. Press the Hour button several times until your desired number of hours appears in the remote control. Press the Off timer button again to set the portable air conditioner to turn on in that number of hours.

8. Power button

This button turns the air conditioner on or off.

9. Hour button (for on/off timer)

As noted above, this button adjusts the number of hours to delay the On or Off timer. Additionally, this button is used to adjust the clock function of the remote control.

10. Minute button

This button is used to adjust the time on the clock function of the remote control. To set the clock, make sure the remote control is off.

- a. Press and hold the On timer and Off timer buttons
- b. After about 2 seconds, the clock icon in the LCD display will start blinking. When it starts blinking, release the buttons.
- c. Adjust the time with the hour and minute buttons. Each time you press the hour button, the hour portion on the time will increase by 1. Each time you press the minute button, the minute portion on the time will increase by 1.
- d. When you have reached the correct time, press and hold the On timer and Off timer buttons until the clock stops flashing. Release the buttons- the time is now set.